

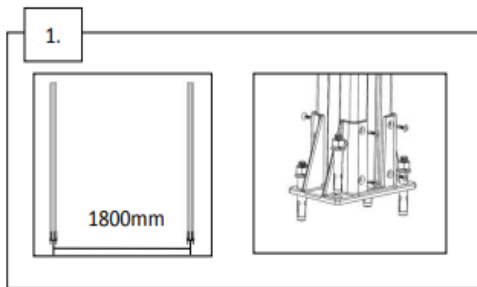


—Privacy Fence Installation —

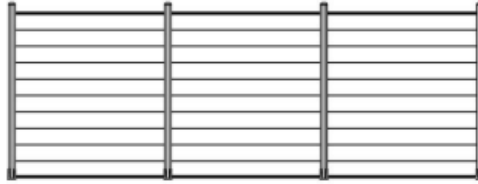


1. Fixing the Post


(put it 500mm into the soil or using the post base)

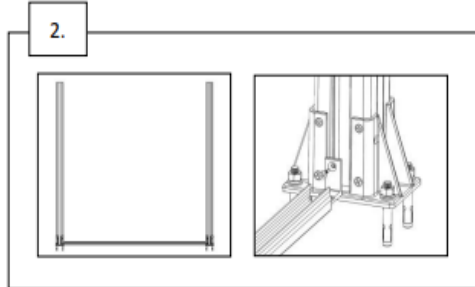

2. Install the bottom rail

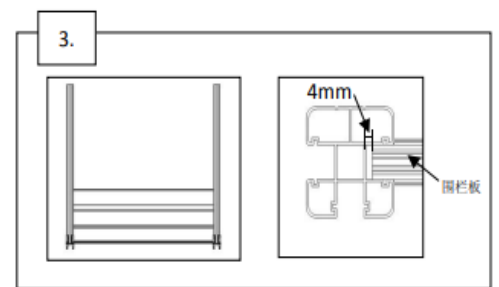


3. Install the WPC panels one by one
(leave 4mm gap between the post and panels)

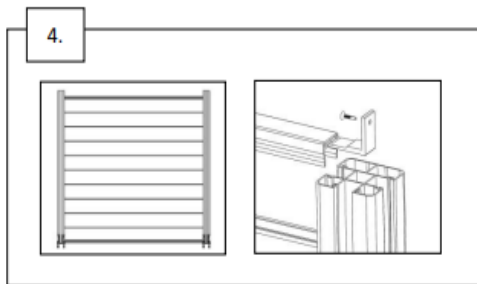


4. Install the top rail

(be careful about the direction of the L-fittings)

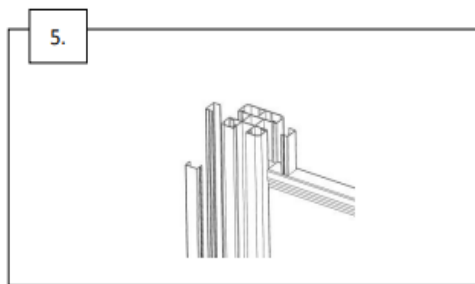

5. Install the side cover

(Please do not forget the inside side cover)

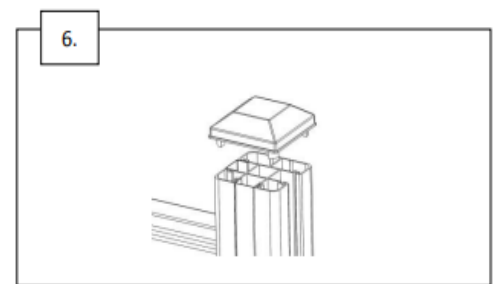

6. Cover with the post cap

Stap 1: We adviseren de palen minimaal 50cm de grond in te plaatsen. Voeg daarbij voldoende betonmortel toe. Idealiter gaan de palen 80/90cm de grond in. We leveren standaard palen van 280cm lengte zodat ze voldoende de grond in kunnen.

Stap 2: De Haakse hoekjes bevestig je in de onder en boven rail, je schroeft de onder rail daarna vast met de meegeleverde zelftappers op de gewenste hoogte rechtstreeks tegen de paal.

Stap 3: Je kunt nu de planken een voor een tussen de palen schuiven, let op dat de planken aan beide kanten circa 4/8mm van de paal af blijven zodat de planken wat ruimte houden.

Stap 4: De boven rail schroef je net zoals de onder rail rechtstreeks tegen de aluminium paal.

Stap 5: Monteer de meegeleverde afwerk strip in de palen zodat alles netjes afgewerkt is.

Stap 6: plaats de paalkap op de paal.